Manuel d'instructions

THANK YOU for buying this product. To help ensure it gives complete satisfaction please install it according to these instructions, and then pass the instructions to the ap propriate person for retention and future reference.

SAFETY. Before installation or maintenance the electrical supply to the product must be isolated.

Mains supply:100-277V or 100-347V AC +/- 10%,50/60Hz

Caution:

Veuillez lire le manuel d'utilisation avant l'installation.

• Veuillez installer, connecter et tester la lampe conformément aux réglementations locales. Les lampes doivent toujours être installées ou remplacées avec soin par un professionnel.
• Assurez-vous que l'alimentation est coupée avant l'installation.
• Veuillez vérifier si les lampes sont cassées ou non pendant l'expédition, les articles cassés ne peuvent plus être utilisés.
• Veuillez garder les lampes et les accessoires hors de portée des enfants pour éviter qu'ils soient blessés par des erreurs.
• Pour protéger les yeux, veuillez ne pas regarder la surface lumineuse pendant une longue période.
• Ne couvrez rien sur la lampe et éloignez les lampes du feu ou des objets à haute température.
• Coupez l'alimentation et laissez refroidir la lampe avant de la nettoyer.
• La lampe ne convient qu'à un environnement faiblement acide et faiblement basique.
• Veuillez NE PAS installer ce produit dans les endroits suivants :
1. L'endroit a une grande quantité de noir de fumée et de fumée.
2. L'endroit contient une grande quantité de substance chimique corrosive.
3. L'endroit a de mauvaises conditions de température, une variation de température à grande échelle, ce qui entraînerait facilement une rupture et endommagerait le produit, la température de fonctionnement applicable est comprise entre -20 et 40 degrés, Stockage -20 et 60 degrés.
• CE PRODUIT DOIT ÊTRE INSTALLÉ CONFORMÉMENT AU CODE D'INSTALLATION APPLICABLE PAR UNE PERSONNE FAMILIALE AVEC LA CONSTRUCTION ET LE FONCTIONNEMENT DU PRODUIT ET LES DANGERS IMPLIQUÉS.

DIMENSION

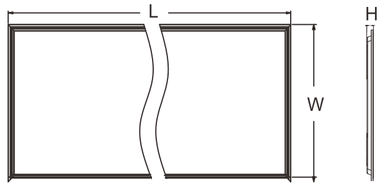

Model	L(mm)	W(mm)	H(mm)
BEST-LED-PANEL-2X2-M	603	603	30
BEST-LED-PANEL-2X4-M	1213	603	30

WIRING INSTRUCTIONS

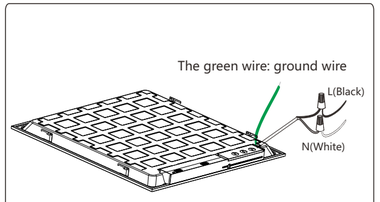

Non-dimmable wiring diagram

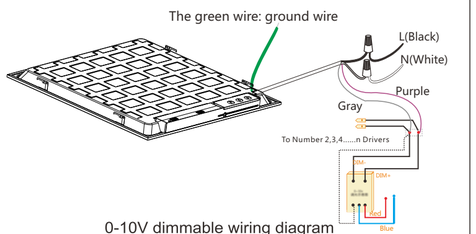

0-10V dimmable wiring diagram

INSTALLATION INSTRUCTIONS

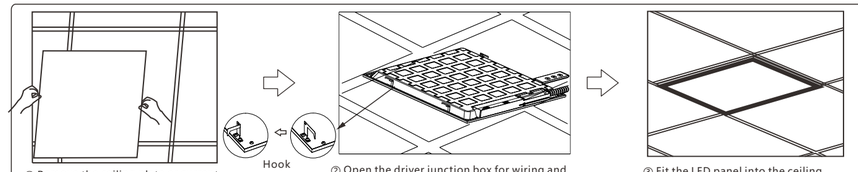

Built-in

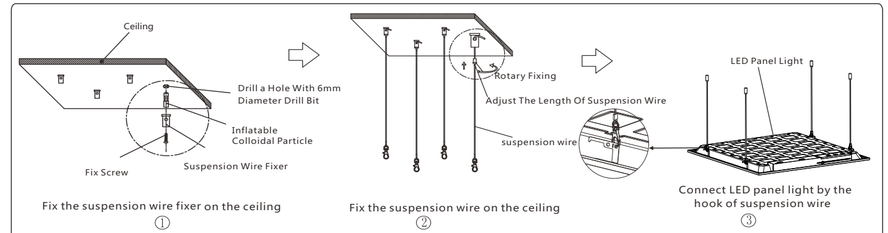

Suspended

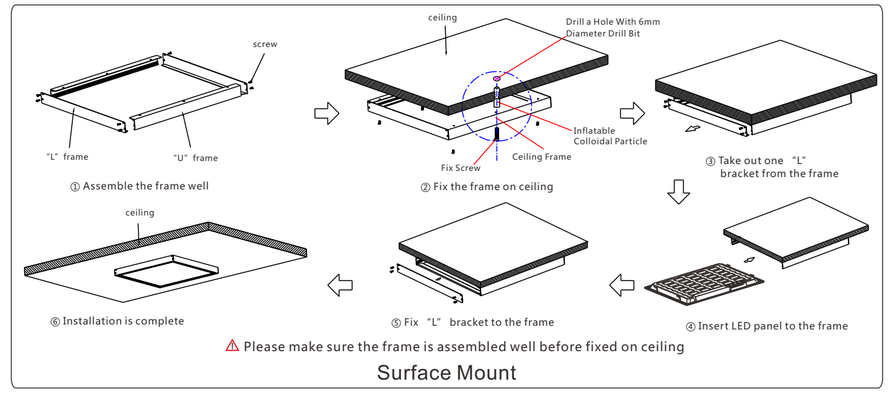

Surface Mount

Troubleshooting

Warning: Please disconnect before troubleshooting.

Fault phenomenon	Troubleshooting
The lamp doesn't work	1.The input switch is not turned on, please turn on the switch 2.The voltage does not match,if the driver is damaged, and the lamp needs to be replaced 3.The dimming light is connected reversely, please reconnect 4.The AC line is connected to the dimmer, if the driver is damaged, the lamp needs to be replaced 5. If there are 4 pins on the input end, please check whether it is connected wrongly (L line and N line can not be cross connected, other wise will occur short circuit)
Lights flash	1.The driver is damaged and the lamp needs to be replaced. 2.The swithch is not dialed in place (it cannot be dialed between 2 powers. the adjust switch is successfully toggled well when heard the ticking sound) 3.Please adjust the switch if the brightness lower or the CCT wrong
Unable dimming	Check the dimmer or dimmer system wiring
The light cannot be dimmed to the lowest	Adjust the dimmer knob, observe the lamp brightness, and reset the minimum threshold